Visit www.metro.com/resources or scan the QR code for assembly videos, warranty information, cleaning guidelines and more!

Scanner ici pour visionner une vidéo de l'assemblage détaillé


Para ver un video de instrucciones detalladas sobre el montaje, escanee aquí.

ASSEMBLY AND USE INSTRUCTIONS


ENCLOSURE PANELS WITH TAPPED/UNTAPPED HARDWARE

Save this document for application, load rating, and safety reference.


Top Hardware:

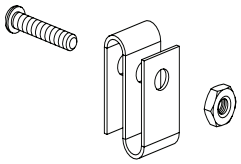

Bottom Hardware:

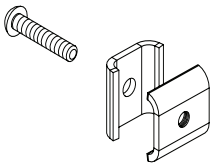

Tools Required:

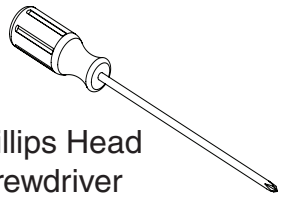


Phillips Head Screwdriver

SHELF LOCATIONS FOR ENCLOSURE PANEL ASSEMBLY


Post Height	Super Erecta Wire/ Solid Mobile		Super Adjustable Super Erecta (Not Shown)		Top-Track Stationary (Not Shown)		Top-Track Mobile (Not Shown)	
	Top Groove	Bottom Groove	Top Groove	Bottom Groove	Top Groove	Bottom Groove	Top Groove	Bottom Groove
54 in. (1372mm)	**54**	**5**	**53**	**5**	**N/A**	**N/A**	**N/A**	**N/A**
63 in. (1600mm)	**62**	**5**	**61**	**5**	**N/A**	**N/A**	**72**	**3**
74 in. (1880mm)	**74**	**5**	**73**	**5**	**76**	**7**	**N/A**	**N/A**

Note: For stationary applications (without casters), the bottom shelf may be positioned at a higher position on the post to allow for a minimum of 6 in. clearance below the bottom shelf.


1A Super Erecta Wire Top & Bottom Shelf Stationary

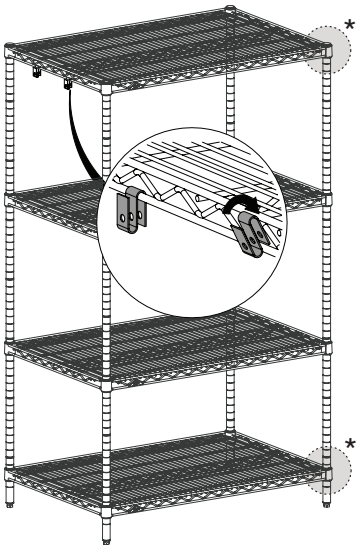


1B Super Erecta Wire Top & Bottom Shelf Mobile

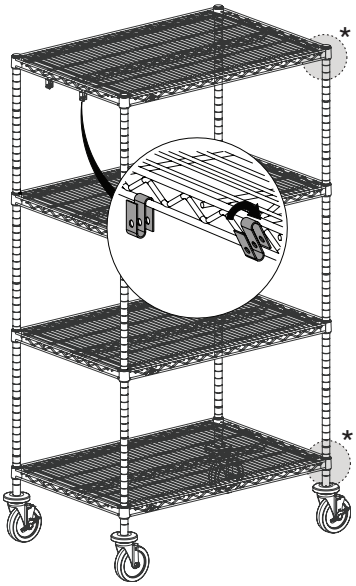

1C Super Erecta Wire Top & Super Erecta Solid Bottom

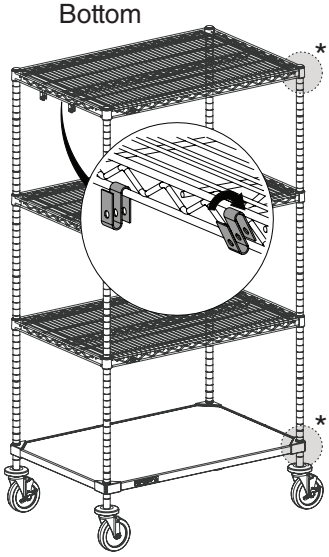


1D Super Erecta Solid Top & Bottom Shelf

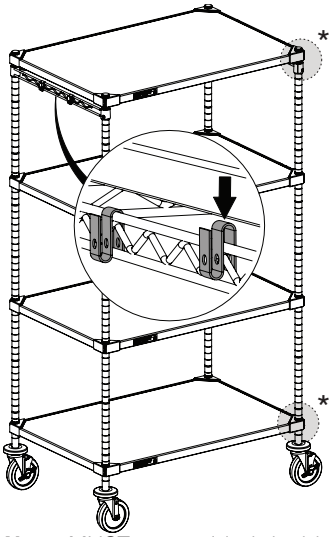


Note: MUST use 3-sided double snake frame below top Solid Shelf, leave two grooves open above frame.

* Refer to chart above for shelf locations.


2

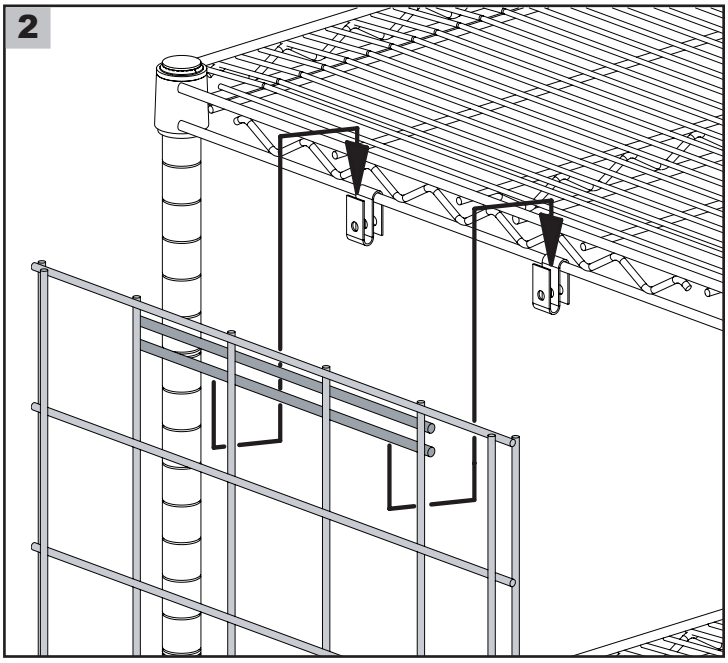


3

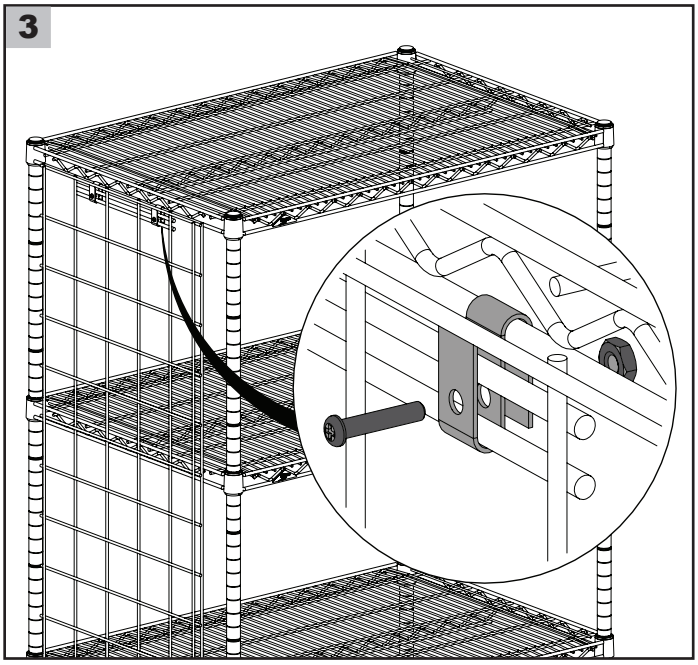

4A Wire Bottom Shelf

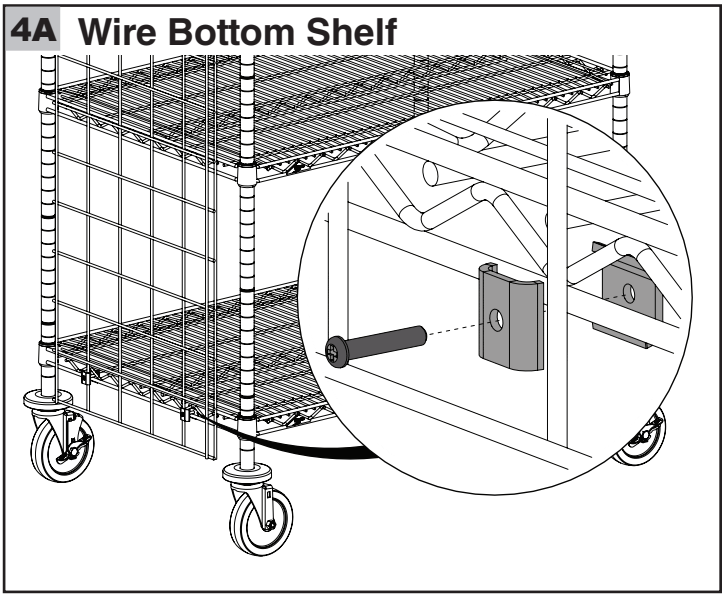

4B Solid Bottom Shelf

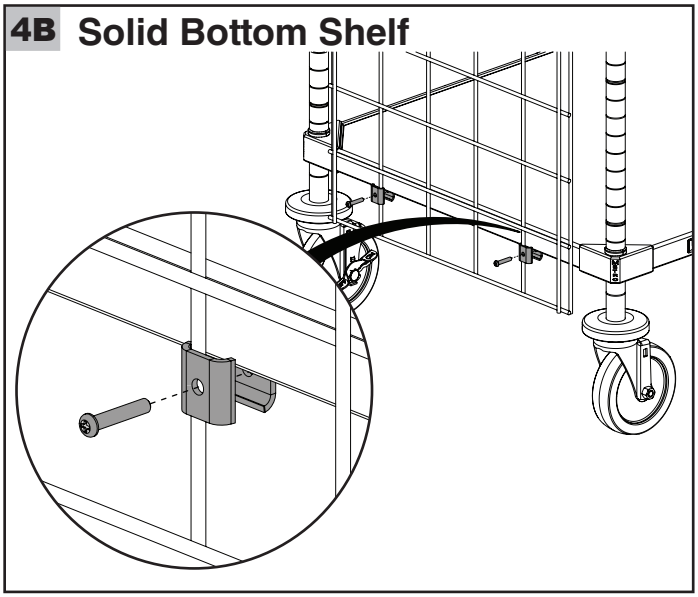

Note:
For more rugged applications, additional mounting hardware may be used to secure enclosure panels at each shelf location.

9970Z (Bag of 8 clamps, Zinc Plated)
9970S (Bag of 8 clamps, Stainless Steel)

METRO®
We put space to work.

© 2025 InterMetro Industries Corporation, Wilkes-Barre, PA 18705
L01-296 REV E 03/26

Ali GROUP

WELBILT
an Ali Group Company